


SPRAY-BAR VALVE BOXES

FOAM OPTION (BOX IS ON THE LEFT END OF SPRAY-BAR)

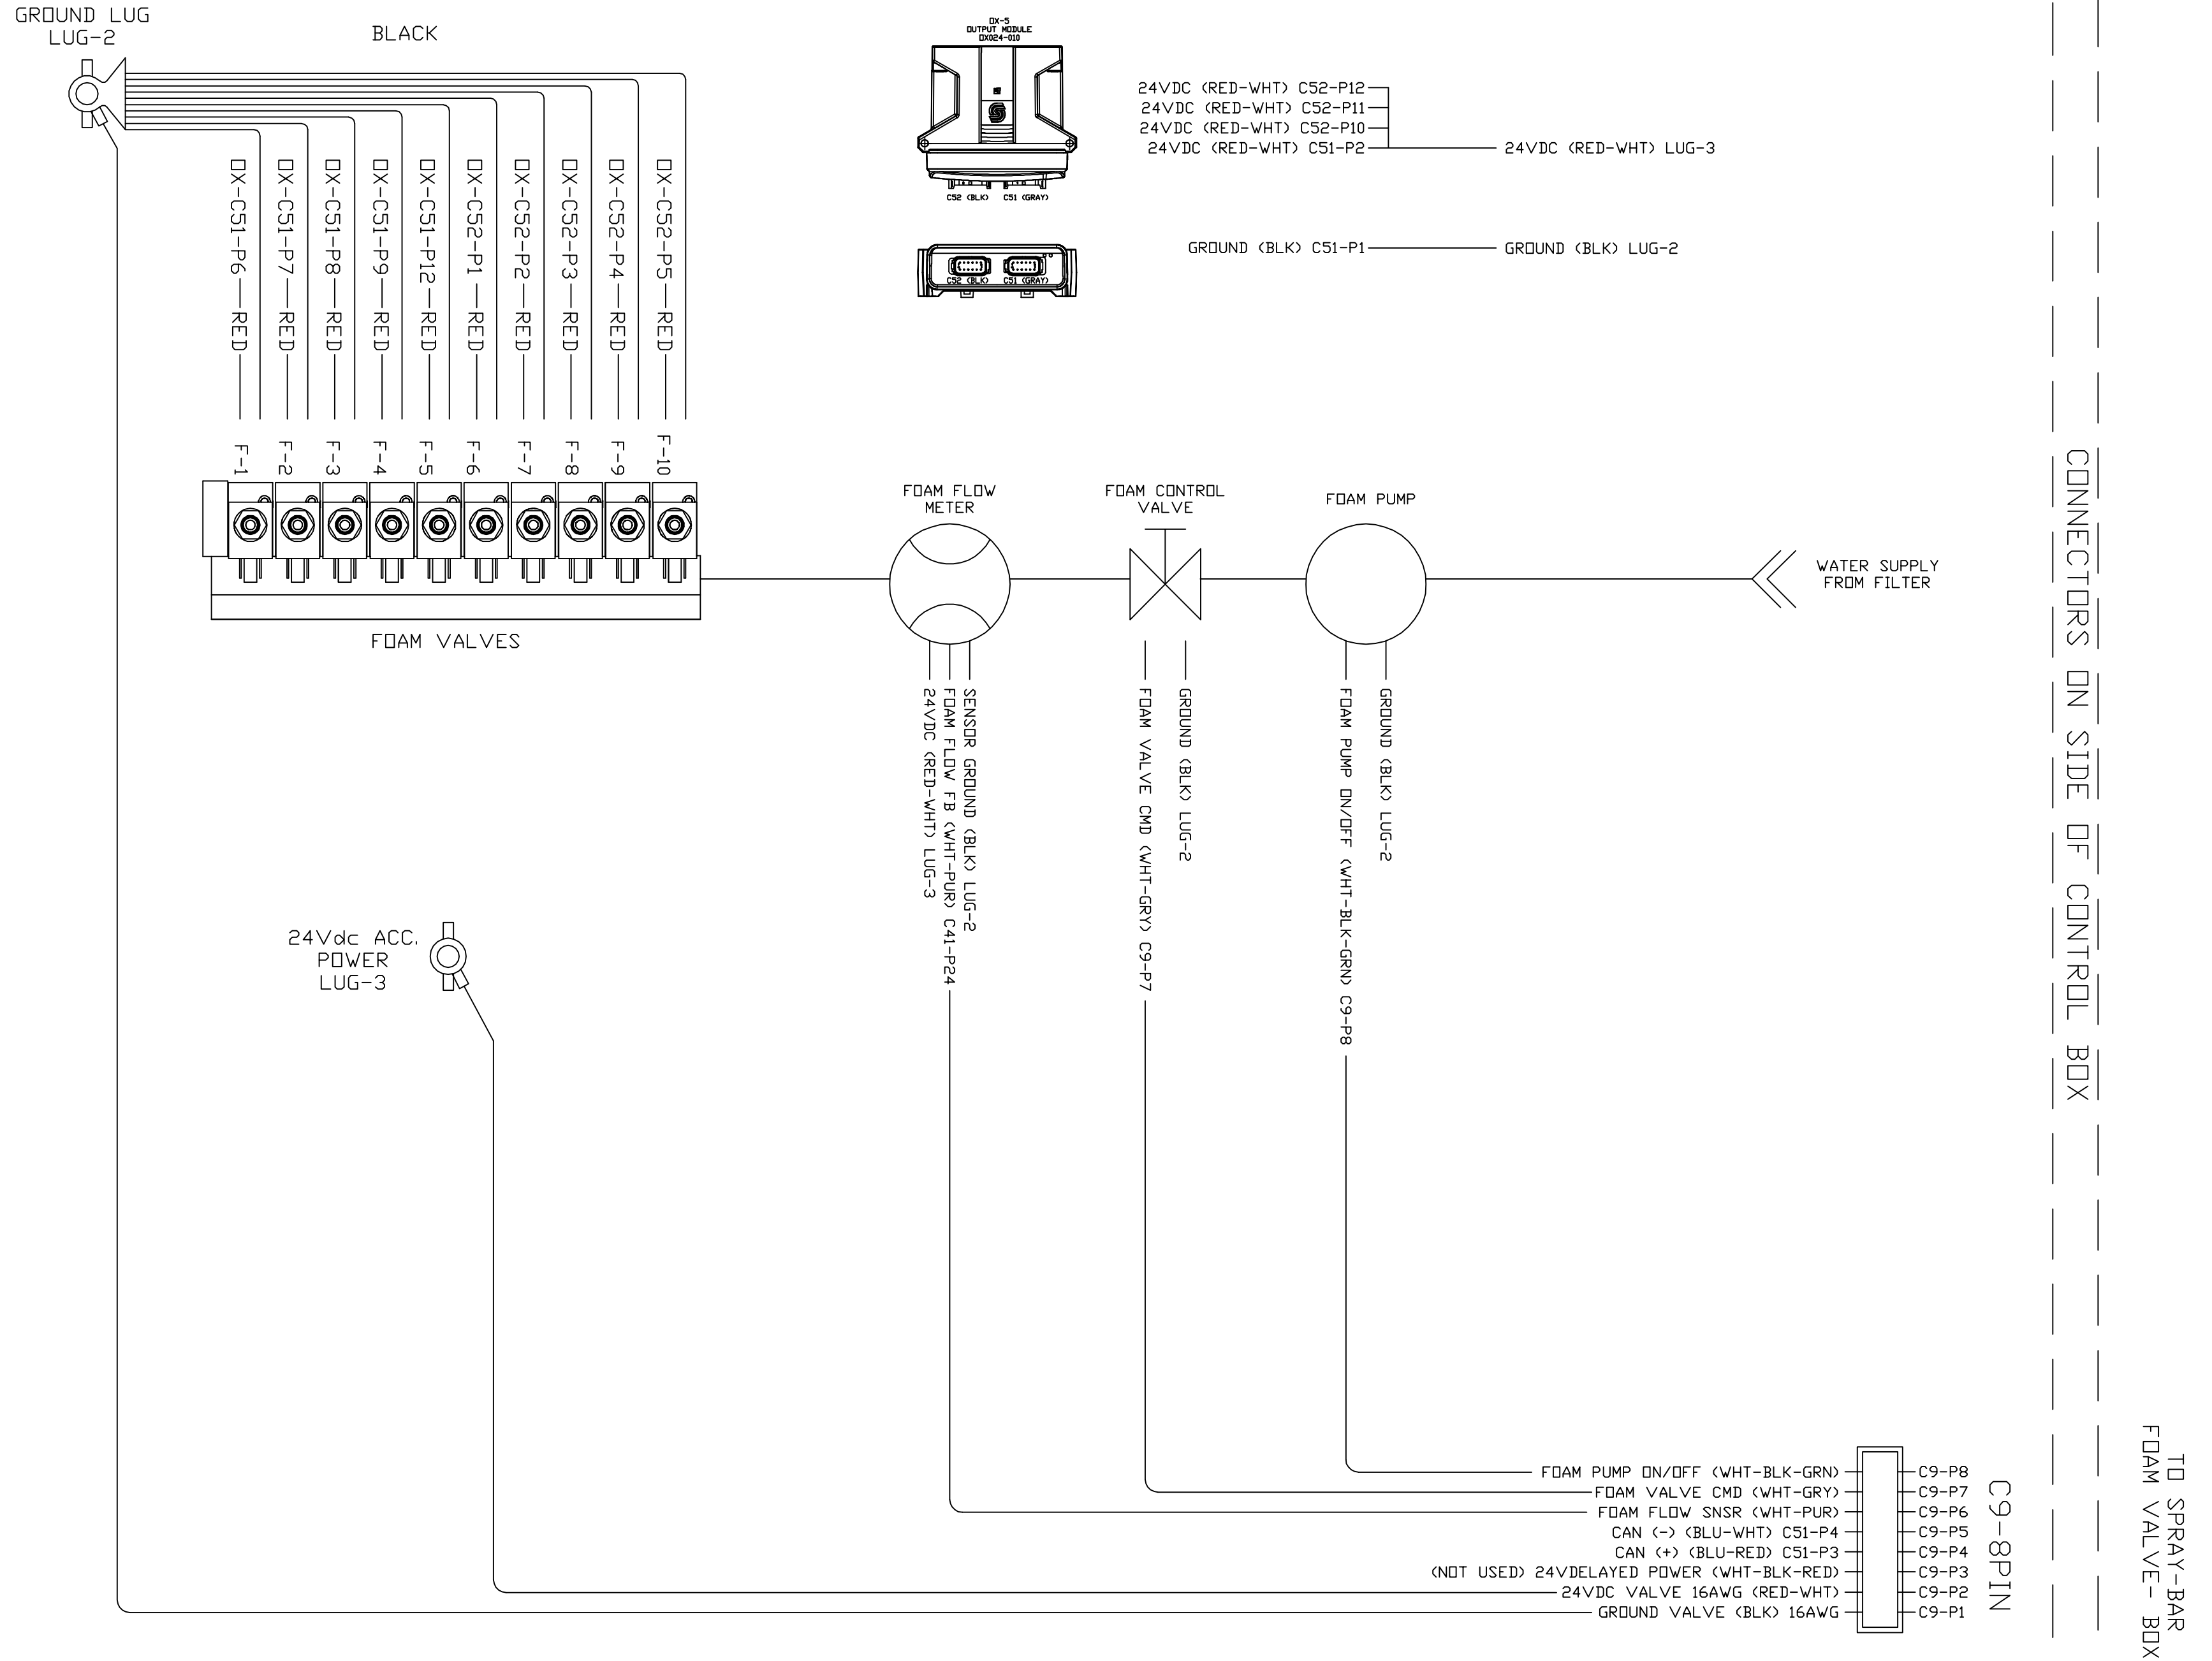

AIR VALVES FOR SPRAY VALVES (BOX IS ON RIGHT END OF SPRAY-BAR)

