



PREASSEMBLE AND PREWIRE AS FOLLOWS:

- STEP#1 ASSEMBLE ENGRAVED PANEL TO FRONT PANEL WITH SWITCHES AND POT. INSTALL KNOB. ASSEMBLE GROUND SCREW
- STEP#2 PREWIRE THE GROUND WIRES ON THE SWITCHES AND POT. TO GROUND SCREW. SOLDER RESISTOR AND WIRE TO SWITCH.
- STEP#3 ASSEMBLE SCREWS IN HOUSING (6-PLCS).
- STEP#4 THE 10-CONDUCTOR AND FLEX WILL BE INSTALLED IN THE TRUCK SHOP.

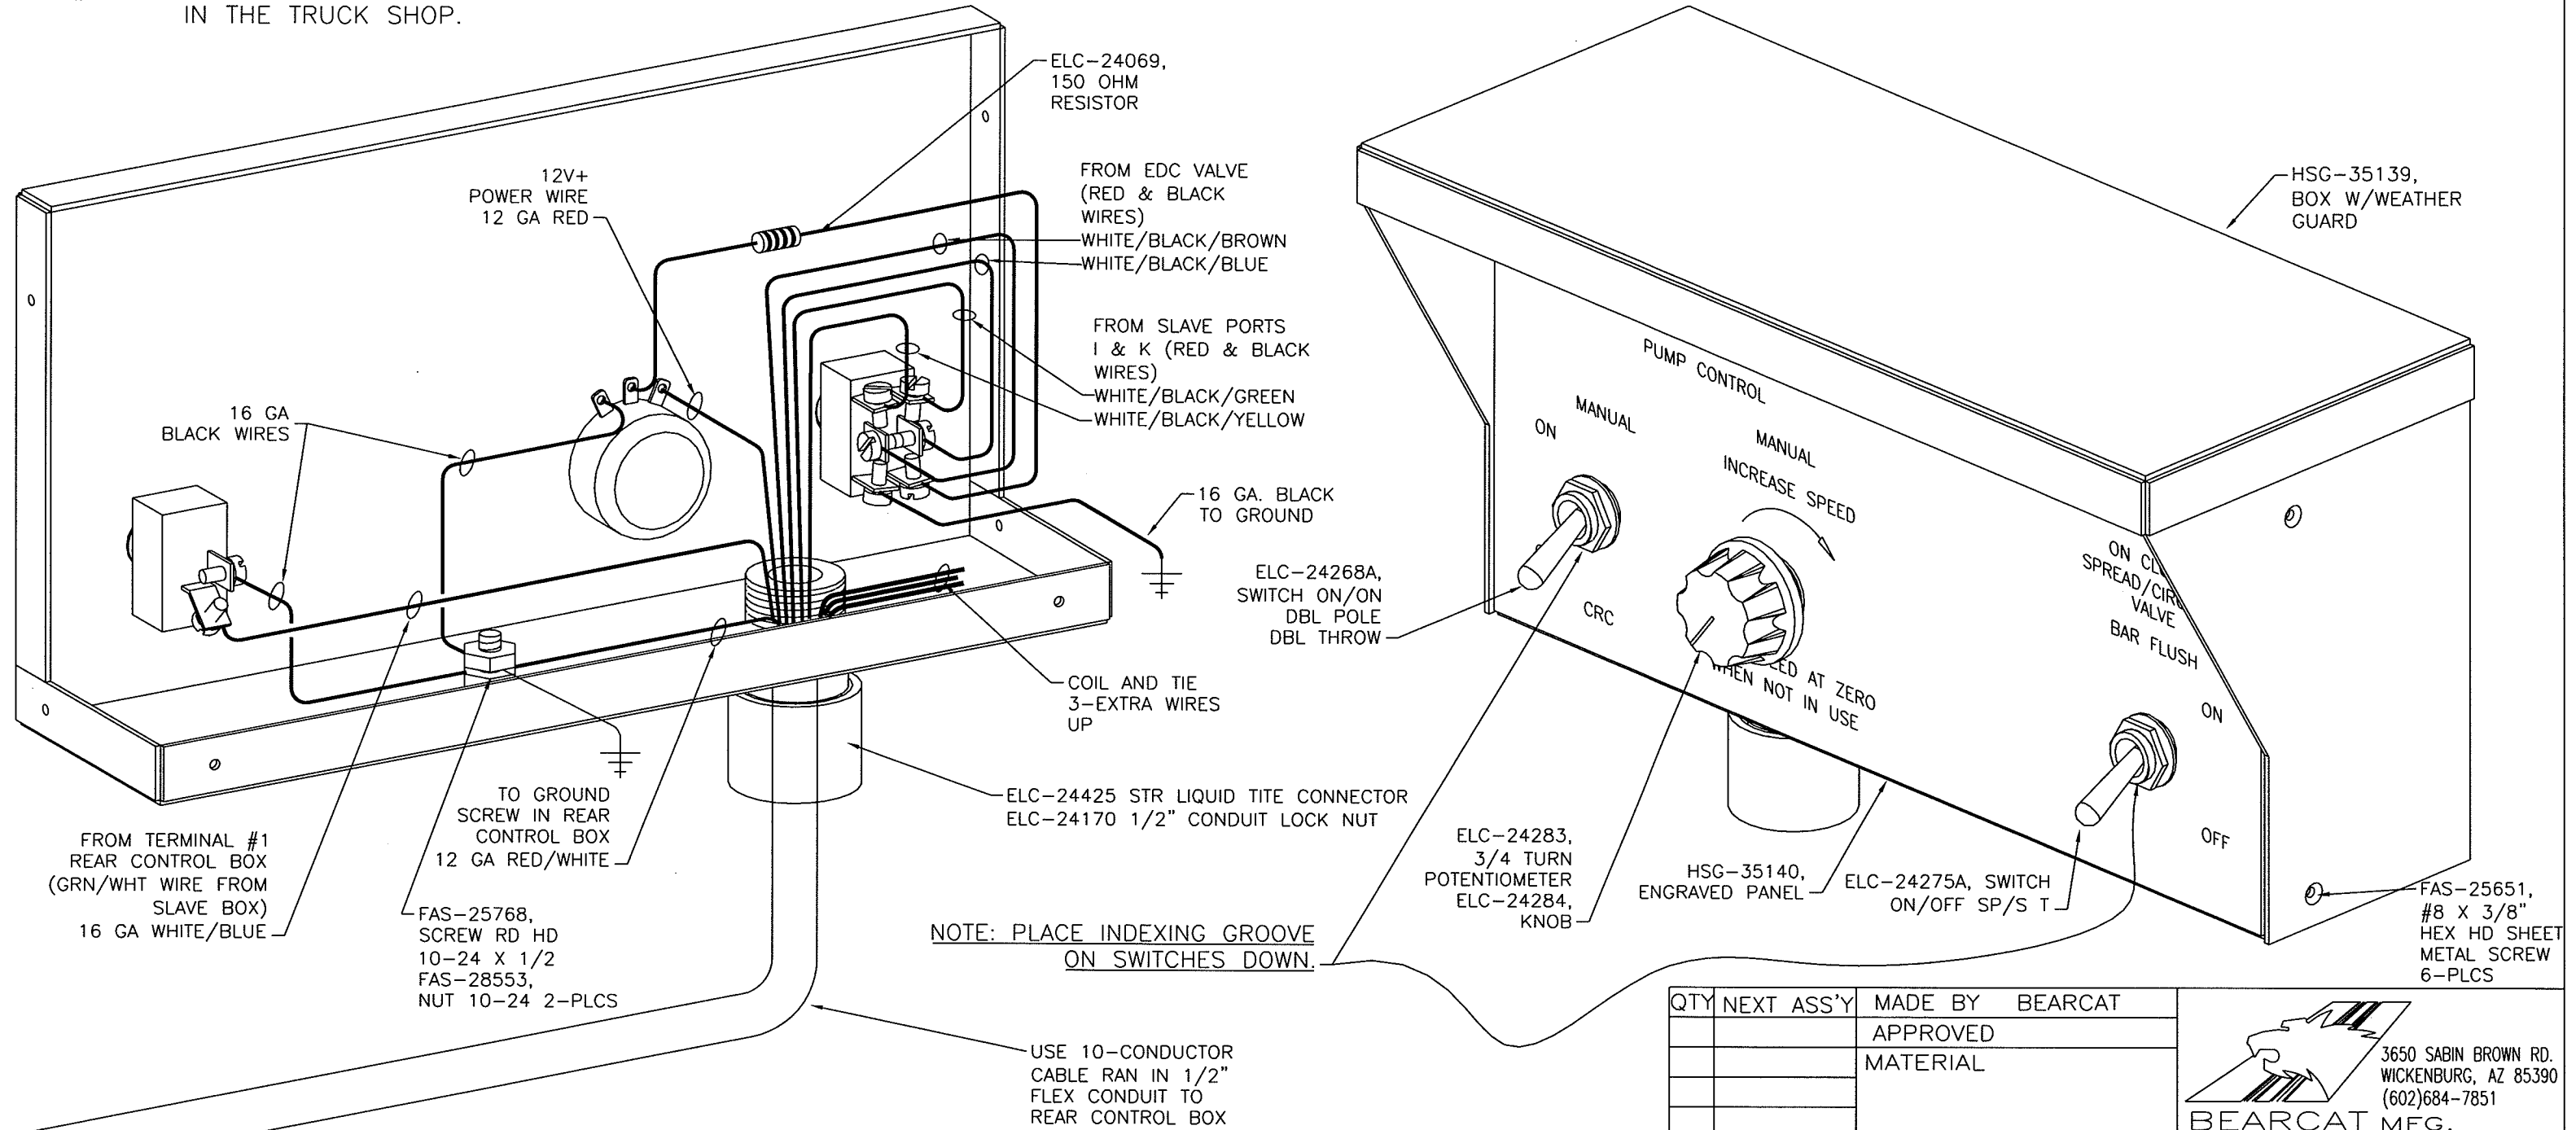

QTY	NEXT ASS'Y	MADE BY BEARCAT	 3650 SABIN BROWN RD. WICKENBURG, AZ 85390 (602)684-7851 BEARCAT MFG.							
		APPROVED								
		MATERIAL								
	FINAL ASS'Y	DRAWING NO.	TITLE							
1	SPREADER TRUCK	24612	BOX ASSY PUMP CONTROL CRC/MANUAL SWITCH							
		FINISH	PART NO.							
			HSG-24612							
STANDARD	.X	.XX	.XXX	.XXXX	ANG.	X/X	AUTHOR	JDC/FHK	DATE	11-1-01
TOLERANCE	±.02	±.010	±.003	±.0005	±1.0°	± 1/32	SCALE	NONE	SHEET	1 OF 1